



## **MicroLouvre® Screen Fitting Instructions**




Clean window (ideally with deionised water).  
Allow to fully dry, with no water residue visible  
before proceeding to next step.

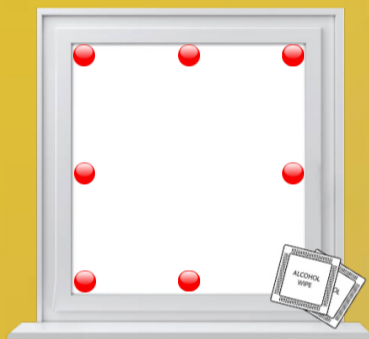



Use alcohol wipes provided to clean the areas  
where dual lock tape will be adhered.  
Allow to fully dry before proceeding to next step.

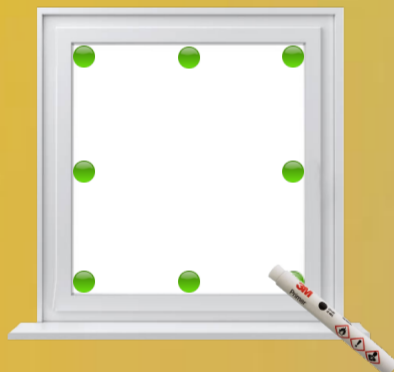

Use primer pen provided to prime the area  
where dual lock tape will be adhered.  
Allow to fully dry, before proceeding to next step.

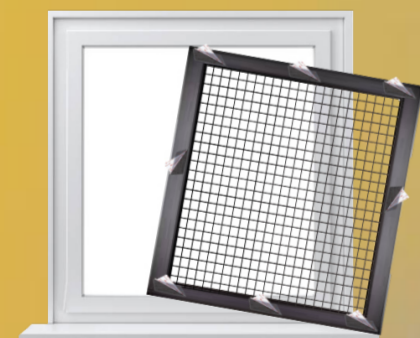

Ensure **Bottom Inside** sticker is at the base of the  
window frame. This section should face directly to the glass.  
Remove the backing from all dual lock tape pads on  
the screen.

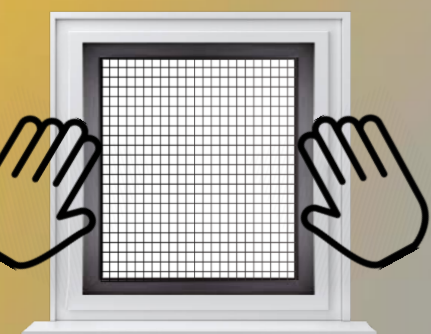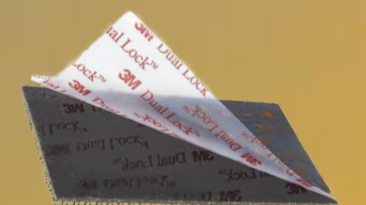

With the pads now facing the window, line up the screen to  
the glazing & adhere to the window. Ensure you are fully happy  
with the alignment of the screen before adhering.  
Once secured allow a full 48hr period for the pads to cure,  
before attempting to remove the screen.